

## STORA-DRAIN

# MAINTENANCE

It is recommended to check the channel run regularly and clean it, if necessary. The channel system has to be inspected at regular intervals. The frequency of the inspection will depend upon the location and the environment. Following items have to be inspected: gratings, channels and sump units.

1. The anchorages of the gratings must be inspected. Loose gratings may cause injuries and may cause damages to the channels and surrounding surfaces.
2. The channels should be cleaned at regular intervals by removing all silt. The gratings can be easily removed to clear away the dirt. For this purpose a cleaning shovel (Art.N° ASZ0000001) is used, which is specially designed to fit in a channel width 100.
3. The sump unit should be emptied periodically. The use of boiling water or chemical products for cleaning the polymer concrete channels is prohibited at all times.

It is advisable to install a sump unit at the end of a channel run. Sump units and gullies can be provided with removable galvanised (or stainless) steel buckets. After cleaning the gratings, these must be relocked. Not fastening the gratings may cause serious damages when the gratings are driven on.

